



Smart SplitterTM User Manual





Welcome to NeoCharge! As EV drivers, we understand the headaches that come with home charging. Costly rewiring and limited options prompted us to find a better solution for charging at home - one that is easier, more cost-effective, and doesn't require expensive panel upgrades.

Our journey led us to collaborate with industry experts, engineers, utilities, and electricians, resulting in the birth of the Smart Splitter - the first product to enable safe, cost-effective, and effortless home EV charging access, without rewiring. It's a significant stride towards making the electrification of homes more affordable and contributing to our climate goals.

But we didn't stop there. We're now focused on optimizing your entire home's energy usage for increased savings, insights, and control starting with your EV charging. **Don't forget to scan the QR code on the large postcard for exclusive early access to the new NeoCharge Connect app.**

We are truly thankful to have earned the trust of tens of thousands of EV drivers across North America, and we extend that gratitude to you for becoming part of our community as well.

Spencer Harrison
Co-Founder and CEO

Akhil Veluru
Co-Founder and CTO

Contents


| | |
|--|---------|
| What's in the Box | Page 03 |
| How it Works | Page 04 |
| Cautionary Advice | Page 05 |
| Configuration | Page 07 |
| Installation Instructions | Page 08 |
| LED Indicators | Page 12 |
| Troubleshooting | Page 13 |
| Warranty | Page 14 |
| Support | Page 14 |

What's in the Box

1 Smart Splitter (1x)



2 Mounting Bracket (1x)

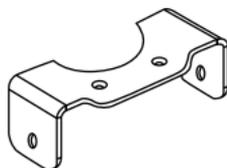

3 Thumb Screws (2x)



4 Panhead Screws (2x)



5 Bracket Screws (2x)



NOTE:

The thumb and panhead screws are interchangeable when securing the bracket to the Smart Splitter.

- Thumb Screws: For quick plug-and-play
- Panhead Screws: A low profile option to avoid interfering with the orientation of larger plugs and cords. Screw driver required.

How it Works

The Smart Splitter functions by monitoring the total power coming from both outlets and shutting off the Secondary side when the power draw exceeds the limit of your circuit. Once the Primary side finishes drawing power, the Splitter will automatically switch back to the Secondary side if it is still attempting to draw power.

The Primary outlet will always allow for a minimal amount of power that is necessary to power LED screens, even when the Secondary is active. This “idle mode” allows you to interact with and turn on the Primary device which will then completely shut off the Secondary.

APPLIANCE AUTO-SWITCHING



Ev is charging



Appliance starts, EV charging automatically pauses



When appliance finishes, EV charging resumes

DUAL EV AUTO-SWITCHING



Primary EV is charging, Secondary outlet is shut off



Primary EV completes charging session, power switches to Secondary

Due to the completely automated switching functionality, there is no remote for the Smart Splitter.

Cautionary Advice



Do not set your EV charging amperage:

>40 Amps on a 50A breaker

>24 Amps on a 30A breaker



Only use your Smart Splitter within the specified operating parameters.



Do not use (or discontinue using) the NeoCharge if it is defective, appears cracked, frayed, broken or otherwise damaged, or fails to operate.



Do not use the NeoCharge in any outlet for which it is not designed.



Do not attempt to open, disassemble, repair, tamper with, or modify your Smart Splitter. Your device is not able to be serviced by the user. Please contact NeoCharge Support for any repairs.



Do not disconnect your Smart Splitter when it is supplying power to either output.



Do not plug the NeoCharge into a damaged, loose or worn power outlet. Ensure that the prongs on your device fit snugly into your wall outlet.



Do not expose your unit to flammable or harsh chemicals or vapors. Do not use or store your device in a recessed area or below floor level. When using your Smart Splitter indoors, ensure that the device is positioned at least 18 inches (46 cm) above the floor.

-  Avoid and prevent your Smart Splitter from foreign objects as well as moisture and water at all times. If any sort of corrosion or damage is suspected discontinue use immediately. If rain falls during charging, do not allow rain water to run along the length of the charge cable plugged into your device.

-  Do not plug your Smart Splitter into an electrical outlet that is submerged in water or covered in snow. In the event of this situation, turn off your breaker and then unplug your device.

-  Do not touch the Smart Splitter's end terminals with sharp metallic objects such as wire, tools or needles. Do not insert any foreign objects into any part of your device. Avoid the use of cleaning solvents with your device.

-  Do not use private power generation as a source for charging.

-  Do not operate your Smart Splitter in temperatures outside of its operating range of -22°F to 122°F (-30°C to 50°C).

-  Store your device in a clean and dry place inside the temperatures of -40°F to 185°F (-40°C to 85°C).

Configuration

! Ensuring Your Setup Meets Safety Guidelines

The max charging amperage you can utilize as a continuous load is 80% of your breaker rating (US and Canada Electrical Codes).



Circuit Breaker Amperage



Charge Amperage

50 Amp Breaker → 40 Amp or less

30 Amp Breaker → 24 Amp or less



PRO TIP: Your charging amperage can be adjusted in most newer EVs and EVSEs (Electric Vehicle Supply Equipment).

Simultaneous EV Charging (50A Breaker Only)

If you have two EVs/EVSEs with adjustable amperage capabilities, you have the option to charge both EVs simultaneously at half power. As long as the total load from both sides does not exceed the Smart Splitter's switching limits, both cars will receive power.

To Enable Simultaneous Charging: Set both EVs to charge at 20A or less, so the total amperage does not exceed 40 Amps.

SIMULTANEOUS EV CHARGING



Charge two EVs simultaneously at half speed

Installation Instructions

Step 1 - Turn Breaker Off

Turn off the breaker to your 240v outlet then unplug your appliance or EV charger that is currently occupying it.




Step 2 - Install Mounting Bracket

Determine the correct mounting bracket orientation for your outlet.

- ! Ensure that the mounting bracket is in alignment with the gold colored mounting points on your Smart Splitter. See pictures on page 9 for the correct bracket orientation for each outlet.



Unscrew the corresponding screws from the faceplate, then screw in the bracket using the bracket screws (2x) so the mounting bracket is flush with the faceplate.

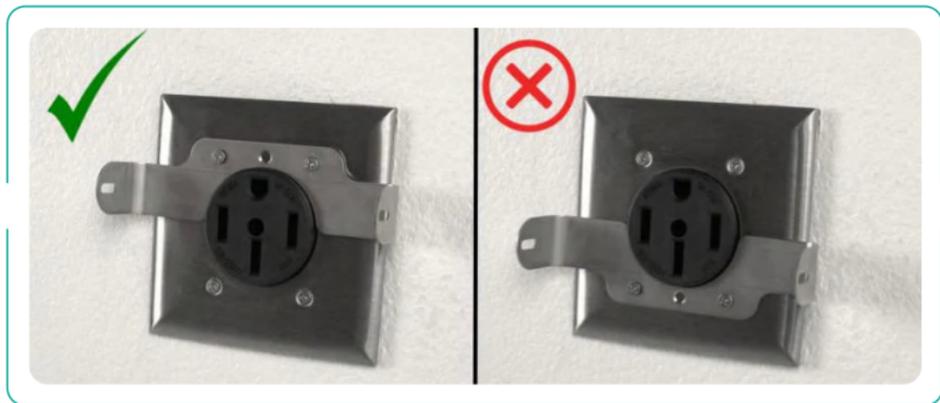

NEMA 10-30



NEMA 14-30



NEMA 14-50



NEMA 6-50



NEMA 10-50

**WARNING!**

An improperly installed bracket will overlap with the Smart Splitter's side receptacles and can cause a short from metal-on-metal contact. Please double check that your Smart Splitter's mounting bracket aligns properly with the mounting points before turning your breaker back on.

**NOTES for bracket orientation:**

- 240V outlets do not always have a standard orientation and may be mounted "sideways" or "upside down". Not to worry - orientation does not impact the Smart Splitter. Simply use the provided mounting bracket so the Splitter is properly secured.
- Some older faceplates only have two mounting points - one centered above and one below the outlet receptacle. Use the center hole on the provided mounting bracket. This is most common with NEMA 10-30 and 10-50 outlets.

Step 3 - Plug in Smart Splitter

Plug in your Smart Splitter (it feels good, we know) and secure to the mounting bracket using the thumb screws (x2). Alternatively, you may also use the provided panhead screws (x2) if you would prefer a lower profile or the thumb screws interfere with any of your cables.



Step 4 - Plug in Your Primary Device

Plug your priority appliance or EV into the Primary Output of your Smart Splitter. Primary is indicated with "PRI" on the side of the Smart Splitter next to the LED indicator.



The device plugged in to the Primary side will always take priority over the device plugged into the Secondary side. This is typically your appliance, or if charging two EVs, the Primary should be the EV you want to charge first.

Step 5 - Plug in your Secondary Device


Plug your EVSE cord into the Secondary Output of your Smart Splitter. Secondary is indicated with "SEC" on the side of the Smart Splitter next to the LED indicator.



If you are using an extension cord with your Smart Splitter, please ensure the cord is UL certified and is the proper gauge wire.


Step 6 - Turn Breaker On

Turn on the circuit breaker to your outlet and verify that your Smart Splitter is receiving power by ensuring that the indicator lights are on.

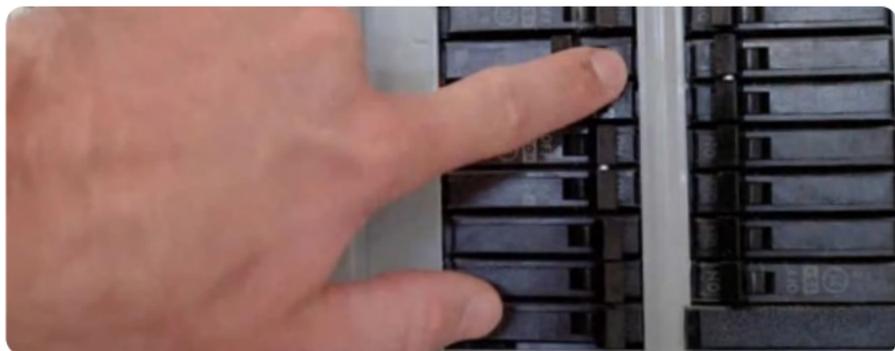

The Smart Splitter lights will turn white once the device is powered.

LED Indicators

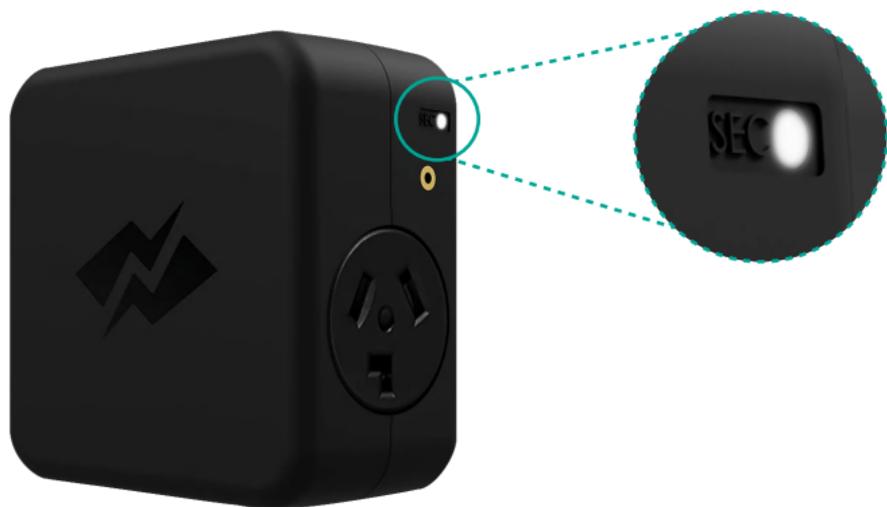

White – Idle/On



Green – Receiving power



Yellow – Charging paused



Blue (flashing) – WiFi Pairing Mode

- Pairing mode is active for the first 5 minutes after the device is power cycled



Red – Error; Charging stopped (lower the current limit)

Troubleshooting

Having issues with your Smart Splitter? Worry not; we're here to guide you through the troubleshooting process. Follow these simple steps to address common concerns:

1. Basic Checks:

Begin by ensuring that your Smart Splitter is correctly connected to your power source and devices, and that your circuit breaker is turned on.

2. Visit our Website:

For more comprehensive troubleshooting assistance, please go to our website at getneocharge.com. For quick help, scan the QR code below.



3. Follow Troubleshooting Flows

On our website, you'll spot a **chat button** conveniently located in the lower right corner. Click it to initiate step-by-step troubleshooting flows tailored specifically to your Smart Splitter issue



4. Support Chat

If you still need help, our knowledgeable support staff of EV charging experts will step in to best assist you.

Warranty

All Smart Splitters are covered with a 2 year limited warranty from the date of purchase.

NeoCharge warrants the Smart Splitter product against defects in materials and workmanship under normal use for two years from the date of purchase. If a Smart Splitter is deemed defective, NeoCharge will repair or replace, at no charge, the Smart Splitter or parts of the Smart Splitter that prove defective.

The warranty includes:

- Defects in materials and workmanship
- Shipping damage
- Any material, equipment, tools, and incidentals necessary to complete repairs including replacements
- Supplier or manufacturer upgrades

The warranty excludes:

- If the device has been opened, altered, abused, or misused by the owner

After receiving a customer notice, the NeoCharge Customer Support team will help troubleshoot and, if defective, issue a return/replacement.

**NeoCharge shall make the final decision, with fairness to all parties, as to the legitimacy of the claim to this warranty.*

Support

We are always ready to help! If you have any questions, you can contact us via the contacts below:

 support@getneocharge.com

 805-622-2783 (Text Only)

 www.getneocharge.com



Your Feedback Matters!



[**CLICK HERE**](#)

We Love Hearing From You And Learning From Your Feedback